

INSTALL CLASS 1 TYPE B, EROSION MATTING AFTER BACKFILLING THE SOIL, WE NEED TO HOLD THE SLOPE.

